

Please read carefully before use and keep it properly.

We supply warranty within 12 months after purchase date for all qualified machines. During warranty, we will offer repair services and the free parts but without essential oil. Pass the warranty period, service with compensation, lifetime maintenance, please read the detail items from the below warranty list.


01 Equipment Installation




① Insert the magnetic card into the slot to unlock the atomizer head (with essential oil bottle attached)



② Press down on the atomizer head and pull it out in one piece when it pops up

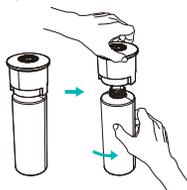

 ③ Unscrew the essential oil bottle in the direction of the arrow. Add the essential oil consumables and put it back into the atomizer head counter-clockwise.



④ Connect the power supply after putting the nebulizer head back into the device.

Wall hanging: first fix the backboard to the wall with screws. Then hang the device along the screw position on the backboard holes.

02 Product Parameter


- size: W279×D179×H407mm
- weight: 7kg
- voltage: AC220V
- capacity: 1000mL
- power: 20W
- coverage: 5000-8000m³ (With fan)

03 Packing

Equipment × 1, Power cable × 1, Silicone Fluorine Rubber Gasket × 1, Atomization core × 1, Magnetic card × 1, User Manual × 1, Tube × 1, Spanner × 1, Connector × 1, Wall nails × 6

04 Button/Indicator Function Description

Button Illustration:

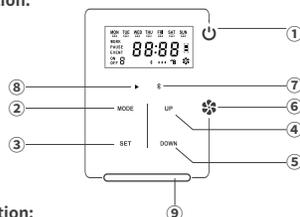

Button Description:

- ① Power button: pause / turn on the device .
- ② MODE button: operating mode, working frequency, page selection set button, long press 5 seconds to restore the factory settings, and the buzzer prompts two sounds.
- ③ SET button: clock setting, week setting and setting keys, long press 3 seconds to lock and unlock the key, and the buzzer prompts two sounds.
- ④ UP button: increase the value button.
- ⑤ DOWN button: Decrease the value of the button.
- ⑥ Fan switch button: Tap the fan button icon to turn on or off the fan function under power-on state.

Data Memory Function: After setting the data, you need to return to the main interface and wait for 15 seconds for the data to be saved.

Indicator light status description:

- ① Power indicator: green light on behalf of the device in operation, red light on behalf of the device in the stop state
- ⑦ Bluetooth indicator: Bluetooth connection, the blue light flashes, and the buzzer will prompt two sounds
- ⑧ Air pump indicator: green light flashes when the air pump is running, the air pump stops when the green light is off
- ⑨ Oil level display light: (air pump stops after the start of detection of the value of essential oil, other times do not detect)

low level	medium level	high level
Red light always on	Yellow light always on	Green light always on

**When the key lamp is off, press any key to make it light up before key setting.

05 System time setting

Press **[SET]** for first time, the hourly figure flashes, then press **[UP/DOWN]** to adjust hour.

Press **[SET]** for second time. Hour adjustment finished. The minutes figure will flash, then press **[UP/DOWN]** to adjust the minutes.

Press **[SET]** for the third time, Minutes adjustment finished. The weekday figure will flash, press **[UP/DOWN]** to adjust the current date.

finally press **[SET]** for fourth time, all function setting finished.

06 Working mode and atomizing setting (five groups)

● The first time press **[MODE]** key, the LCD display shows the factory set time, the machine can set 5 kinds of working time period.

For example: set 8:00-10:00, 11:00-12:00, 13:00-14:00. Across 00:00, two time periods can be set, such as the first time period 08:00-23:59, the second 00:01-06:00.

After the first time, press the **[SET]** key to enter the start working time setting of the first time period, the hourly start period number flashes, press the **[UP/DOWN]** key to adjust the hourly start time;

Press **[SET]** key after the second time, the hour start time setting is finished, the minute start time number flashes, press **[UP/DOWN]** key to adjust the minute start time;

The third time, press the **[SET]** key, the minute start time is set, jump to the week set, single press the **[UP]** key in the LCD screen above the week column displays the symbol "▲" is selected for the desired work week, does not show "▲" that is, not selected, and then press the **[DOWN]** key to move to the right to adjust the hourly start time. **[DOWN]** to move to the right cycle to continue to set other week combinations.

● Press **[MODE]** key for the second time to set the end time of the first time period. The first time you press the **[SET]** key, the hour-end time slot number flashes, press the **[UP/DOWN]** key to adjust the hour-end time slot; the second time you press the **[SET]** key, the hour-end time slot is set, the minute-end time slot number flashes, press the **[UP/DOWN]** key to adjust the minute-end time slot.

● Press the **[MODE]** key for the third time to carry out the equipment turn-on time period (concentration setting). Press **[UP/DOWN]** key to adjust the concentration, select the appropriate concentration, adjust 5 seconds per press, the maximum value is 200 seconds, the minimum value is 5 seconds.

● Press the **[MODE]** key for the fourth time for the equipment pause length (concentration setting). Press **[UP/DOWN]** key to adjust the concentration, select the appropriate concentration, adjust 5 seconds per press, the maximum value is 600 seconds, the minimum value is 20 seconds.

##After the above settings are made, you can enter the next set of mode settings as needed, if not, you can continue to press **[MODE]** to return to the initial LCD page.

07 Bluetooth Setting

• Home page

Scan code to download and install the app "Scent Tech", start the APP, complete the beginner's guide, select Bluetooth mode to enter the home page, at this time the available devices column displays the available Bluetooth devices that have been plugged in within the Bluetooth range, click to select the available devices to enter the status page.



(APP download)


Tip: App permission configuration, including location services, Bluetooth connection, and sending notifications are allowed.

• Status page

1. Status window: display current working mode parameters and status, including time, day of the week, Bluetooth connection status, etc.
2. Running status: The cell phone can turn on/off the device running status, turn on/off the fan, turn on/off the device lock with one click;
3. Working Mode: Display the current running working mode, click on the working mode column to enter the mode setting, you can set 5 groups of working modes respectively, click on any mode column to customize the setting of week, time period and working frequency:
 - ① Week setting: customize the weekly working date.
 - ② time period setting: customize the time period for adding fragrance.
Note: Can not be set across the day (the end time can not be less than the start time), such as the need to set across the 00:00 work, respectively, set the two ends of the continuous time period can be, for example, the need to set 23:00 ~ 02:00 work, respectively, set to 23:00 ~ 23:59, 00:00 ~ 02:00 can be set to two groups.
 - ③ working frequency setting: you can adjust the concentration of space fragrance (by controlling the frequency of spraying fragrance).
4. Device address: device configuration network successfully obtain network positioning address.
5. Click the upper right corner of more: rename the device.

08 Change the Atomization core

The atomization head include:oil bottle,oil suction pipe,filter,atomization core.Take down the oil bottle,remove the atomizing core and pull out the suction pipe,then change the new atomization core and the suction pipe.

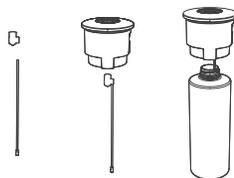

09 Equipment Maintenance

If the equipment is not used for a long time, 95% industrial alcohol should be added into the refined oil bottle to clean the nozzle and other parts inside the equipment.**Tip: Maintain the equipment with 95% industrial alcohol at least every 1-2 months.**

Specific operation: add 95% industrial alcohol into the empty bottle, turn on the equipment and run for 10-15 minutes after, then turn off the equipment and pour the alcohol, then screw back the bottle to machine.

10 Warranty


- The Warranty is suitable for new machine but not resell or second hand products.
- Within 12 months after purchase date, Warranty is offered for all qualified machines. During warranty,we will offer repair services and the free parts but without essential oil.
- The warranty card & purchase Invoice are needed if after service required. Please contact with us within warranty if any problems.
- The following is not for free warranty service:
 - ① Damage & problems caused by Accidents & Fire.
 - ② Not use properly and wrong operation.
 - ③ If repaired by not professional person and make some parts damaged.
 - ④ Damaged during transportation.
 - ⑤ Without our warranty card.
 - ⑥ Without proper cleaning for a long time
 - ⑦ The machine work time out.
 - ⑧ Machines & Parts not from us.
 - ⑨ Machines not gotten from official channels.
 - ⑩ Send the machines back without permit from manufacturer .

11 Notice

- The Warranty is suitable for new machine but not resell or second hand products.
- During transportation of the device, the bottle must be emptied to avoid leakage of essential oils and damage to the device.
- Within 12 months after purchase date, Warranty is offered for all qualified machines. During warranty,we will offer repair services and the free parts but without essential oil.
- Do not use overloaded power sockets, power cords and broken power plugs, otherwise your safety may be jeopardized and fire may be caused; Do not damage the lithium battery, otherwise it may lead to danger.
- Please do not open the machine by yourself, If problems, please contact us promptly !

INTELLIGENT LARGE AREA SCENT DIFFUSER

instruction manual

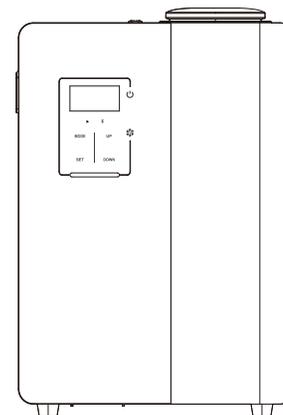

Please read the manual carefully before use and keep it properly