 


HYL-8000H

INTELLIGENT FRAGRANCE MACHINE

 
USER MANUAL

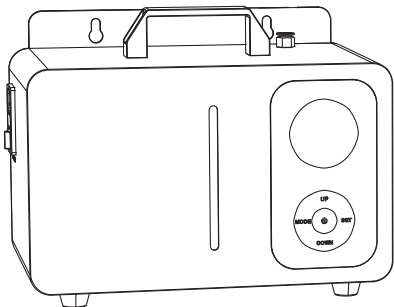

Please read the manual carefully before use and keep it properly


Please read carefully before use and keep it properly.
We supply warranty within 12 months after purchase date for all qualified machines. During warranty,we will offer repair services and the free parts but without essential oil.Pass the warranty period, service with compensation, lifetime maintenance, please read the detail items from the below warranty list.

Operation

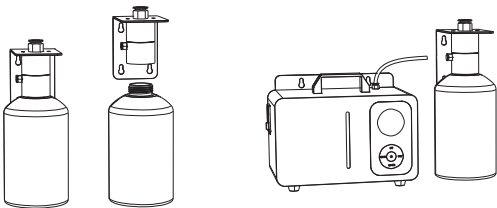

①Rotate the oil bottle out in a clockwise direction,fill the oil then rotate the bottle back in anti-clockwise direction
②Connect the equipment and atomization head by small pipe

 ③Connect the HVAC by the big pipe.

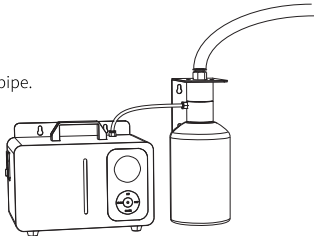


Wall mounting: fix the panel to the wall with screws, then hang the equipment on the panel.

Packing

Equipment x1、Power Adapter x1、 Bottle x1、 Atomization core x1、 Small Pipe x1、 Big Pipe x1、 User Manual x1

Function Keys

 - ①Light on/off,select,Pause Keypad
- ②Work Model,Atomizing frequency,Page keypad
- ③Time and set keypad
- ④Up keypad
- ⑤Down keypad

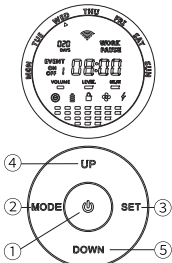

Press MODE 5 seconds to reset the machine and WIFI model.Press Set 5 seconds to lock all keypads,then Press Set 5 seconds again to unlock.Press on/off to pause or start the atomization.Press the on/off 5 seconds to turn on /off the oil level light.

Oil level	>50%	<50%	<25%
Light Color	Green	Blue	Red

Time Setting -24HR and set the Oil consumption parameter

- ①The working time of the equipment is based on local time.Press set to set the clock time,Press Up and down to change the hour,minuter and day.E.g:8:30AM Monday.
- ②Press Set to switch the capacity of oil bottle>Oil level>ML/H consumption parameter,change the parameter by Up and down,then the usage days will be showed in the LCD display.

Working mode and atomizing setting

Press [MODE] and [SET] to Adjust different function, including the local Time、 5 different groups working periods、 Work/Pause interval time、 aroma concentration.

A. E.g: If you want to set the working time as 8:00AM,Monday.Press Model,the LCD display will show [EVENT 1 ON]means it is the START TIME of first group. Then, press [SET]to do the program setting, Press [UP/DOWN]to adjust the hours,minutes and needed working days group.Press Up and Down when confirm the work days of one week then press ON/OFF keypad.The days with ▲ sign means these days are chosen.

B. After set the start and off time,Press Model again to set the aroma Work/Pause interval time,E.g:Work 10 seconds,Pause 60 seconds.

C. After finish A and B.If continue to set working period, continue to press [MODE]to finish all 4 working groups at the same method.

Aroma concentration

Atomize aroma time can be set:5S、 10S、 15S、 20S、 25S、 30S、 35S、 40S、 45S、 50S、 ...300S.Pause time can be set:5S、 10S、 15S、 20S、 25S、 30S、 35S、 40S、 45S、 50S、 ...300S.The energy column is fluctuating when atomizing.

Equipment Maintenance

If the equipment is not used for a long time, 95% industrial alcohol should be added into the refined oil bottle to clean the nozzle and other parts inside the equipment.Tip: Maintain the equipment with 95% industrial alcohol at least every 1-2 months.


Specific operation: add 95% industrial alcohol into the empty bottle, turn on the equipment and run for 10-15 minutes after , then turn off the equipment and pour the alcohol, then screw back the bottle to machine.

Product Parameter

Model: HYL-8000H	Weight: 4.25kg
Voltage: AC 110V / 220V	Capacity: 2000ml
Power: 26W	Coverage: 8000-10000m³
Size: W260xD166xH200mm	

Change the Atomization core

 The atomization head include:oil bottle,oil suction pipe,filter,atomization core.Take down the oil bottle,remove the atomizing core and pull out the suction pipe,then change the new atomization core and the suction pipe.

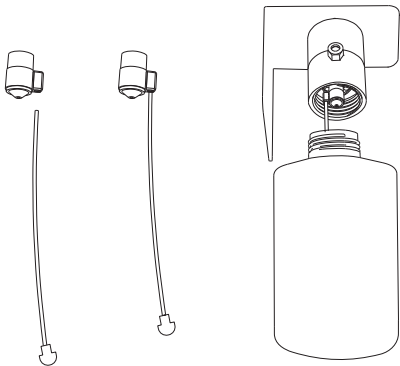

Warranty

- 1.The Warranty is suitable for new machine but not resell or second hand products.
- 2.Within 12 months after purchase date, Warranty is offered for all qualified machines. During warranty,we will offer repair services and the free parts but without essential oil.
- 3.The warranty card & purchase Invoice are needed if after service required. Please do contact with us within warranty if any problems
- 4.The following is not for free warranty service:

- ①Damage & problems caused by Accidents & Fire.
- ②Not use properly and wrong operation.
- ③If repaired by not professional person and make some parts damaged.
- ④Damaged during transportation.
- ⑤Without our warranty card.
- ⑥Without proper cleaning for a long time
- ⑦The machine work time out.
- ⑧Machines & Parts not from us.
- ⑨Machines not gotten from official channels.
- ⑩Send the machines back without permit from manufacturer .

Notice

- 1.Please carefully read the Instruction before installation, and keep the User manual to check if need at anytime
- 2.Please make sure the machine upright ,no leaking and no down; or may damage the device and parts
- 3.Please do not use the broken power wire and make sure the power supply is suitable for the machine, or may cause fire .
- 4.Please do not open the machine by yourself, If problems, please contact us promptly !