


Dear user: Before using this product, please read this manual carefully and keep it properly for future reference.

01/Product Parameter

- Size: 87×87×288mm
- Weight: 660g
- Voltage: Type-C/5V/2A
- Capacity: 120ml
- Power: 1.5W
- Coverage: 200m³


02/Equipment Installation

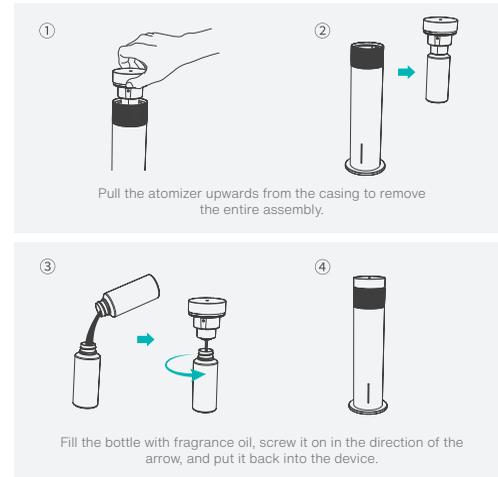

03/Package Contents

Equipment×1, Remote control×1, Type-C Power cable×1, User manual×1, Atomizer accessories×1, Gasket×1, After-sales Card

04/Indicator instruction

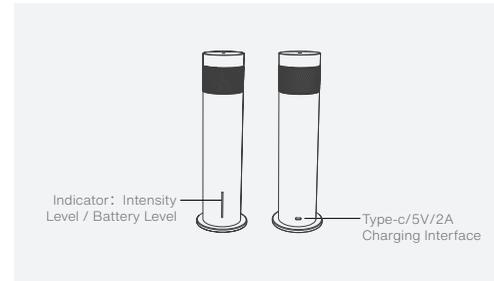


Indicator : Intensity Level (Remote Control Mode)

	High: 3 white lights, pump on for 15s, off for 60s. Default timer: 8 hours.
	Medium: 2 white lights, pump on for 15s, off for 180s. Default timer: 8 hours.
	Low: 1 white light, pump on for 15s, off for 300s. Default timer: 8 hours.

Indicator : Intensity Level (Bluetooth Mode)

	High: 3 blue lights, pump on for 15s, off for 60s. Default timer: 08:00-22:00.
	Medium: 2 blue lights, pump on for 15s, off for 180s. Default timer: 08:00-22:00.
	Low: 1 blue light, pump on for 15s, off for 300s. Default timer: 08:00-22:00.

05/Remote instruction

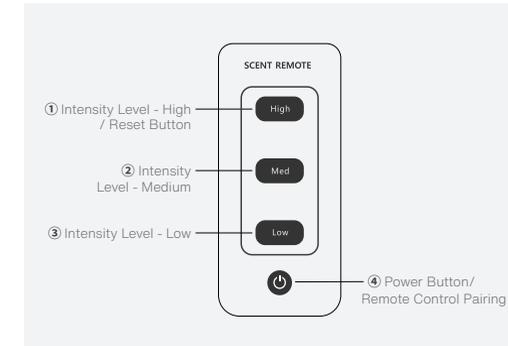

Remote Control Pairing: Press and hold the power button on the remote while plugging in the power. The light flashes green to indicate successful pairing.

① Intensity Level - High / Reset Button:

- Short press to activate High Level: 15s on, 60s off, with a default timer of 8 hours.

- Press and hold for 5s to reset: default to 15s on, 300s off, 8-hour timer.

② **Intensity Level - Medium:** Short press to activate Medium Level: 15s on, 180s off, with a default timer of 8 hours.

③ **Intensity Level - Low:** Short press to activate Low Level: 15s on, 300s off, with a default timer of 8 hours.

④ **Power Button:** Long press for 2 seconds to turn On / Off (Air Pump & Light)

06/Bluetooth Operation Instructions

Scan the QR code to download the "Scent Tech" app. Follow the setup guide, then select Bluetooth mode to enter the home page. The app will display available devices that are powered on within range. Simply click to select a device and enter its status page.

Note: It is for app permission settings, including location services, Bluetooth connection, and notifications.



(APP download)


● Status page

- **Status Windows:** Displays the current operating mode and device status, including the time, day of the week, and Bluetooth connection.
- **Operation:** You can turn the device on or off with one tap from your phone.
- **Work Modes:** Shows the current mode and allows you to configure up to five modes. Each mode can be customized with:
 - ① Days: Set the working days of the week.
 - ② Time Period: Set the operating time range.
Note: Cross-day settings are not supported. If you need to span 00:00, split it into two continuous periods (e.g., 23:00–23:59 and 00:00–02:00).
 - ③ Intensity Levels: High / Medium / Low
 - * Low: 15s ON, 300s OFF, default timer: 08:00-22:00.
 - * Medium: 15s ON, 180s OFF, default timer: 08:00-22:00.
 - * High: 15s ON, 60s OFF, default timer: 08:00-22:00.
- **Device address:** Automatically generated after the device is connected to the network.
- **More Options :** Tap the menu in the top-right corner to rename the device.

07/Atomizer Replacement

The atomizing assembly consists of the atomizing head, the bottle, and the relevant atomizing units.

Operating Steps: Unscrew the oil bottle, wipe off any remaining oil with a dry cloth, remove the atomizing units that need to be replaced, then install the new one securely in its places.

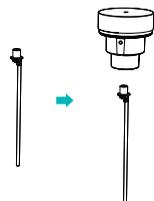

08/Equipment Maintenance

If the device will not be used for an extended period, fill the empty oil bottle with 95% industrial alcohol to clean the nozzle and internal parts.

Tip: Perform this maintenance every 1–2 months.

Operation: Fill the empty bottle with 95% industrial alcohol, turn on the device, let it run for 10–15 minutes, then turn it off, pour out the alcohol, and screw the bottle back onto the machine.


09/Warranty

- The warranty applies only to new machines, not resold or second-hand units.
- We provide a 12-month warranty from the date of purchase for all eligible machines. During the warranty period, we offer repair services and free replacement parts (fragrance oil excluded).
- A warranty card and commercial invoice are required for any service request. Please contact us within the warranty period if any issues occur.
- The following conditions are not covered:
 - ① Damage caused by accidents or fire.
 - ② Improper use or incorrect operation.
 - ③ Damage caused by unauthorized repairs.
 - ④ Damage during transportation.
 - ⑤ Missing warranty card.
 - ⑥ Lack of regular cleaning over a long period.
 - ⑦ Damage caused by overloading or operating the machine beyond its rated working time.
 - ⑧ Machines or parts not supplied by us.
 - ⑨ Machines not purchased through official channels.
 - ⑩ Returning the machine without prior authorization from manufacturer.

10/Precautions

- Read the manual carefully and keep it for reference.
- Empty the bottle during transport to avoid leaks and damage.
- Keep the device upright when filling; do not tilt or invert.
- Do not cover the device while operating; keep outlets/adapters away from the mist.
- Avoid overloaded or damaged power cords/plugs; do not damage the lithium battery.
- Do not disassemble the device; contact us if any issues occur.

SMART SCENT DIFFUSER USER MANUAL

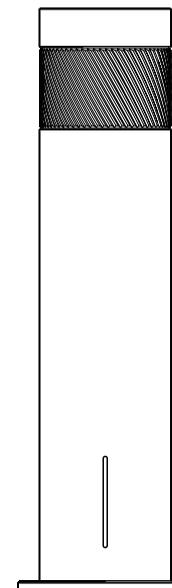

Standard type