


Scan the QR code to download the app

Equipment Operation Video

Equipment after-sales Video

PRODUCT INFORMATION		
Size: 289×166×357mm	Weight: 6.3Kg	Power: 14W
Input: AC 110V/220V	Capacity: 1000ml	Coverage: 5000-8000m³

Unlock the atomizer head with the magnetic card, then take out the entire atomizer head. Next, unscrew the essential oil bottle in the direction of the arrow, add an amount of essential oil, and then reassemble them back into the device.

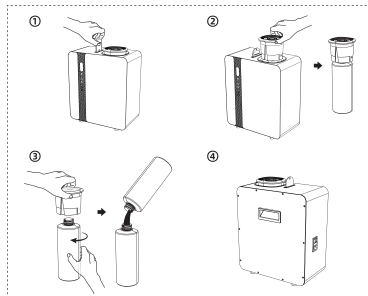

01

WHAT'S INCLUDED				
				
Scent Diffuser (with bottle) x1	Power adapter x1	Gasket x1	Atomizer core x1	Magnetic card x1
				
External connecting tube x1	Wrench x1	Quick-connect fitting x1	User Manual x1	After-sales card x1

Diagram illustrating the front view of the device with the following labeled components:

- Magnetic card
- Atomizer head
- LCD screen
- Indicator Light/ Button
- Power Switch
- Power port

◆ **Button Lock** | Press and hold the SET button for 3 seconds to toggle button lock/unlock, and the buzzer will sound three times.

02

The diagram shows a vertical control panel for an essential oil diffuser. At the top is a digital display showing 'THU 12:00' and '10:45'. Below the display are several buttons and indicators. On the left side, there are labels for 'Day of the Week', 'Operation Status', 'Oil Level', 'Device Lock', 'Work Status', 'Device Power On', 'Bluetooth Light', 'MODE', 'SET', 'UP', 'DOWN', and 'Essential Oil Detection Indicator Light'. On the right side, there are labels for 'Hours/Minutes/On/off time(In setting state)', 'Fan', 'Paused', 'Bluetooth', 'Mode Number', 'Device Power Off', 'Select and flip pages', 'Press and hold for 3 seconds to enter MODE, then restore factory settings', 'Time, day, concentration Setting Button', 'Press and hold for 3 seconds to lock/unlock device', 'Value Decrease', 'Power on/off fan', 'Blue light when powered on', 'Light off when paused', 'Power/Pause Button', 'Blue light when powered on', 'Red light when paused', and 'Press and hold for 3 seconds to turn on/off essential oil detection light'. At the bottom, there are three horizontal bars representing oil level indicators: green for '> 45%', yellow for '10-45%', and red for '< 10%'. The central part of the panel contains a large 'WORK PAUSE EVENT' button with a flower icon, a 'POWER' button with a power symbol, and a 'LOCK' button with a lock symbol.

Day of the Week ----- THU

Operation Status ----- WORK PAUSE EVENT

Oil Level ----- Fan

Device Lock ----- Paused

Work Status ----- Bluetooth

Device Power On ----- Mode Number

Bluetooth Light ----- Device Power Off

- Blue light off: ♦ Select and flip pages

- Blue light not off: ♦ Press and hold for 3 seconds to enter MODE, then restore factory settings

- Constant blue light: ♦ Time, day, concentration Setting Button

- Bluetooth connected: ♦ Press and hold for 3 seconds to lock/unlock device

- Flashing blue light: ♦ Press and hold for 3 seconds to lock/unlock device

- Data update available

MODE ----- ♦ Select and flip pages

SET ----- ♦ Press and hold for 3 seconds to enter MODE, then restore factory settings

UP ----- ♦ Time, day, concentration Setting Button

DOWN ----- ♦ Press and hold for 3 seconds to lock/unlock device

Value Decrease ----- ♦ Press and hold for 3 seconds to lock/unlock device

Power on/off fan ----- ♦ Power/Pause Button

- Blue light when powered on ----- ♦ Blue light when powered on

- Light off when paused ----- ♦ Red light when paused

♦ Essential Oil Detection Indicator Light ----- ♦ Press and hold for 3 seconds to turn on/off essential oil detection light

- Light green when oil level > 45%

- Light yellow when oil level is 10-45%

- Light red when oil level < 10%

03

C Press the [MODE] button for the third time to enter the spray duration (intensity setting). Adjust the intensity by pressing the [UP/DOWN] buttons; select the appropriate intensity, with each press adjusting the duration by 5 seconds, the maximum value is 200 seconds, and the minimum value is 5 seconds.

04

The screenshot shows the TWL01P- app interface. At the top, the status bar displays '5:18', signal strength, and battery level. The app header shows a back arrow, the device name 'TWL01P-', and a settings icon. Below the header is a large stylized 'A' logo. Underneath the logo are two sliders: 'Device oil level: Low' and 'Device oil fragrance:'. Below these are four buttons: 'Power', 'Lock', 'Fan', and 'Restore'. A 'Working Mode' section shows 'Add A Mode' and a note about long pressing. At the bottom, there's a 'Mode I' section with a toggle switch, a timer '04:00-14:00', and a temperature range 'heating: 30.0 Heating: 40.0'. A 'Disconnect' button is at the very bottom.

Annotations on the left side of the image:

- Device Name
- Return to Previous Page
- Bluetooth Connection Status Indicator
- Oil level
- Button lock Start/Standby
- Mode Section: Display current running mode parameters, enter single mode section, long press mode section to delete the mode (at least keep 1 group)

Annotations on the right side of the image:

- Settings: Enter to set device name, avatar, password, and delete the current device.
- Avatar
- Oil type setting
- Fan Switch Button
- Factory Reset Button
- Add A Mode
- Enable/Disable Current Mode
- Disconnect Bluetooth Connection

◆ **All devices** | Available devices within the phone's Bluetooth range are displayed in the "All Devices" group, click on any device icon to connect to that device, after successful connection, it will jump to the device details page.

05

◆ **My Devices** | Devices that have been connected are displayed in the "My Devices" group, devices not currently within Bluetooth range are shown in gray.

◆ **Device Status Page:**

⏻ **Toggle:** The phone can turn the device's operating status on/off with one click.

🔒 **Button's lock:** Turn on/off the button's lock.

🌀 **Fan:** Turn on/off the fan.

🔄 **Factory Reset:** The phone can reset to factory settings with one click.

◆ **Working Mode**

Click "Add" to create up to 5 working modes, click the switch button in the upper right corner of the mode window to turn the mode on/off, long press the mode window to select delete mode, click the mode window to customize and edit days of the week, time periods, and frequency.

-**Day Setting** | Select the desired days.

-**Time Period Setting** | Adjust the dial to select the working time period.

Note: If the time period needs to cross 00:00, it must be set as two consecutive time periods (the end time cannot be less than the start time), for example, 23:00~02:00, set as two groups: 23:00~23:59, 00:00~02:00.

-**Frequency Setting** | Adjust the dial to select the working frequency.

Operating time range: 1~30s; Pause time range: 60~500s.

4 **CONCENTRATION & CONSUMPTION**

Grade	On time(s)	Pause time(s)	Consumption (g/h)
Minimum concentration	5s	600s	0.11
Medium concentration	100s	300s	3.24
Maximum concentration	200s	20s	11.78
100% Text	Continuous On	0	12.96

Note: The data is for reference only. The amount of mist produced by different essential oils may vary. The data above is based on the essential oil used in the test: Park Hyatt (density ≥ 0.95).

5 **MAINTENANCE AND UPKEEP**

Scent diffusers require regular cleaning and maintenance every 1-2 months when in normal use. Below is the method for cleaning.

◆ **Spray nozzle cleaning**

* Use 95% "alcohol + cotton swab" to gently wipe the nozzle, removing the residue of essential oil liquefaction

* Cleaning the atomizer core can be cleaned by soaking a cotton swab in 95% alcohol and wiping the core with it, or by soaking the atomizer core in alcohol and then allowing it to dry.

◆ **Oil bottle cleaning**

* **Before changing essential oils each time, clean the oil bottle with alcohol and allow it to dry completely.**

When equipment is not used for a long period, it is necessary to clean the internal nozzles and other components thoroughly.

* Add 95% industrial alcohol to the empty bottle.

* Turn on the device and run it for 10-15 minutes.

* Turn off the device, pour out the alcohol from the bottle and let it dry before reassembling the device.


* Power off storage, unplug the power supply, to prevent electrostatic damage to the circuit.

6 **REPLACE THE ATOMIZER CORE**

The atomizer head assembly is divided into: atomizer head, essential oil bottle, oil suction tube, filter and atomizer core.

Operation steps: First, unscrew the essential oil bottle, pull out the oil suction tube, and remove the atomizer cover with a holding tool like tweezers. The white part on top is the atomizer core. Wipe the essential oil dry with a dry cloth, then pinch the atomizer core and unscrew it to the right to remove it. Next, replace it with a new atomizer core, and then reassemble all parts back into the device.

Hint: Please pay attention to aligning the oil tube with the atomizer core hole inside the atomizer cover when reinserting it, and ensure all components are tightened to prevent detachment.

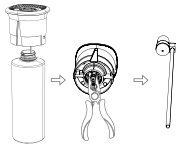

7 **WARRANTY POLICY**

◆ **Replacement/Maintenance is guaranteed for one year from the date of purchase.**

If you need to replace components for free within the warranty period, the device must be under normal use conditions and the failure must be due to manufacturing reasons to provide warranty. During the warranty period, component fees covered by the warranty are waived. This warranty does not include consumables such as oil. To obtain warranty service, please be sure to contact the after-sales department during the warranty period and present the original or copy of the valid warranty card and the official commercial invoice to the relevant departments.

◆ **The following situations do not enjoy free warranty service**

- ① Damage & problems caused by Accidents & Fire!
- ② Not used properly and wrong operation.
- ③ Repaired by non-professionals, causing some parts damaged.
- ④ Damaged during transportation.
- ⑤ Without our warranty card.
- ⑥ Without proper cleaning for a long time.
- ⑦ The machine is overworked.
- ⑧ Machines & Parts not from us.
- ⑨ Machines not purchased from official channels.
- ⑩ Send the machines back without permit from the manufacturer.

⚠️ SAFETY PRECAUTIONS FOR USE

◆ Safe use

① After loading the essential oil, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.

② During the transportation of the equipment, it is necessary to empty the essential oils from the bottles to avoid oil leakage and damage to the equipment.

③ This device cannot be used for air humidification and cannot be filled with water;

④ Please place it in a location inaccessible to children and pets.

⑤ Store in a dry and cool place, do not use this device in high temperature or humid environments.

◆ Forbidden

① Do not cover the equipment in use.

② Prohibit the use of overloaded power outlets, power cords, or damaged power plugs, as this may damage equipment or even cause fires.

③ Essential oils should not be ingested and should be kept away from contact with the eyes. In case of eye contact, rinse thoroughly with plenty of water; if there is a strong sensation, seek medical attention immediately.

④ Please do not disassemble the equipment. If any abnormalities are found in the product, please contact us promptly.


User Manual

Smart
Scent Diffuser



Screen Version

Scent machine

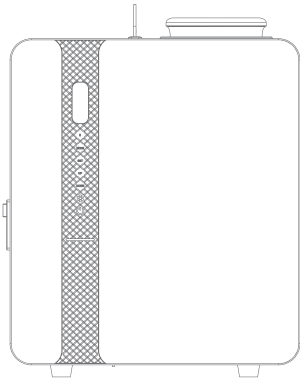

[Please read the manual carefully before use and keep it properly]