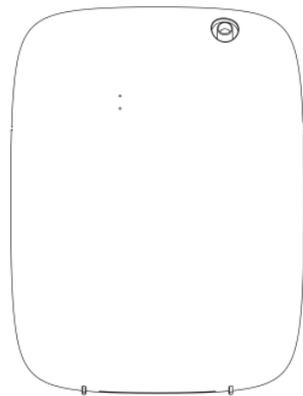# SMART SCENT DIFFUSER
USER MANUAL

CE FC ✓

Please read and follow the instructions carefully. You may also scan the QR code below to view the operation video:

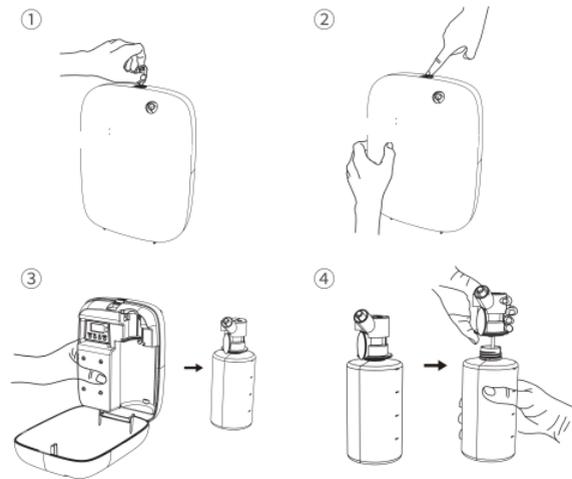Scan the QR code to download the app

Equipment Operation Video

Equipment after-sales Video

Product Information		
Size: 215×165×80.5mm	Weight: 0.9Kg	Power: 5W
Input: DC 12V/1A	Capacity: 400ml	Coverage: 500-1000m³

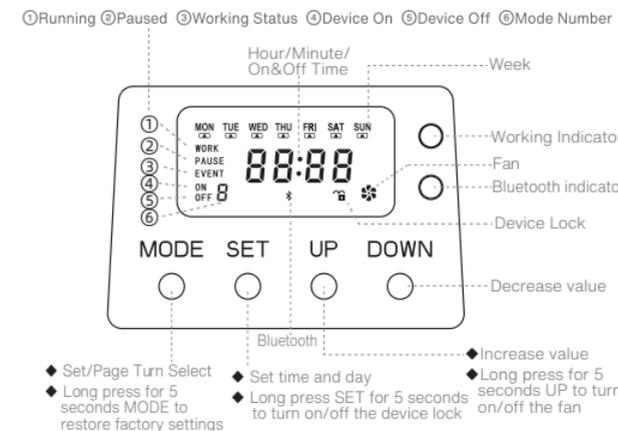| Packaging accessories			
Scent Diffuser (with bottle) ×1	Power adapter ×1	Gasket ×1	Keys×2
Atomizer components × 1	Wall-mounted hooks × 1	After-sales card ×1	User Manual ×1

LCD

INSTALLATION

① ②

③ ④

Wall-mounted: First, fix the wall hooks to the wall, then hang the device along the screw position on the back panel hole.
Warning: After loading essential oils, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.

INDICATOR LIGHT / BUTTON

①Running ②Paused ③Working Status ④Device On ⑤Device Off ⑥Mode Number

Hour/Minute/On&Off Time
Week
Working Indicator
Fan
Bluetooth indicator
Device Lock
Decrease value

MODE   SET   UP   DOWN

◆ Set/Page Turn Select
◆ Long press for 5 seconds MODE to restore factory settings

◆ Set time and day
◆ Long press SET for 5 seconds to turn on/off the device lock

Bluetooth

◆Increase value
◆Long press for 5 seconds UP to turn on/off the fan

1 Sound prompt
The device emits a "beep" upon any valid button operation.
Bluetooth connection or data reception: the buzzer will beep three time.

2 Indicators
● Work Indicator Light: Green solid when air pump is working; Red solid when paused.
● Bluetooth Indicator Light: Blue light flashes quickly 3 times and then stays on when connected; Light turns off when disconnected; Green light flashes quickly 3 times when updating data.

---

3 BUTTONS

Tips: You can scan the QR code to download Scent-Tech for faster settings (see APP control below).
- **Factory Reset**: Press and hold the [MODE] button for 5 seconds to reset to factory settings. The green work indicator light will flash quickly 3 times.
- **Button Lock**: Press and hold the [SET] button for 5 seconds to lock/unlock the buttons. The green work indicator light will flash quickly 3 times.
- **Fan Lock**: Press and hold the [UP] button for 5 seconds to turn on/off the fan. The green work indicator light will flash quickly 3 times.

1 Set the system time by buttons
- Press the [SET] button for the first time to enter the hour setting.
The hour digits will flash, adjust the hour time by pressing the [UP/DOWN] buttons.
- Press the [SET]button for the second time, the hour is confirmed and set, and move to the minute setting.
The minute digits will flash, adjust the minute time by pressing the [UP/DOWN] buttons.
- Press the [SET]button for the third time, the minute is confirmed and set, and move to the workday setting.
The workday digits will flash, adjust the workday time by pressing the [UP/DOWN] buttons.
- Press the [SET]button for the fourth time, confirm that the system time setting is complete.

2 Button settings for working mode (total of 5 groups)

A First, press the [MODE]button,
the LCD display shows the factory setting time, this machine can set 5 working modes. For example: set 8 am-10 am, 11 am-12 pm, 1 pm-2 pm. Crossing over 00:00, set two time periods, such as the first period 08:00-

23:59, the second period 00:01-06:00.

The first time you press the [SET] button, you enter the start time setting for the first time period, the hour digits flash, and you adjust the hour by pressing the [UP/DOWN] buttons.

Press the [SET] button for the second time, the hour setting is completed. The minute digits flash. Adjust the minute by pressing the [UP/DOWN] buttons. Upon the third press of the [SET] button, the minute setting is completed, and move to set the work day. Pressing the [UP] button once will display the symbol " ▲ " at the top of the LCD screen in the day of the week column, indicating that the workday is selected. If " ▲ " is not displayed, it means it is not selected. Then press [DOWN] to move right and continue setting other day combinations.

B Press the [MODE] button for the second time to set the off time.

The first press of the [SET] button enter the setting of hour, adjust the hour by pressing the [UP/DOWN] buttons; the second press of the [SET] button completes the hour setting, and the minute digits begin to blink, adjust the minute by pressing the [UP/DOWN] buttons.

C Press the [MODE] button for the third time to enter the spray duration (intensity setting).

Adjust the intensity by pressing the[UP/DOWN] buttons, select the appropriate intensity, with each press adjusting the duration by 5 seconds, the maximum value is 200 seconds, and the minimum value is 5 seconds.

D Press the[MODE]button for the fourth time to enter the pause duration (intensity setting).

Adjust the pause time by pressing the[UP/DOWN]buttons, Each press adjusts the duration by 5 seconds, the maximum value being 600 seconds and the minimum value being 20 seconds.

After setting this, you can enter the next group of mode settings as needed, or you can continue pressing [MODE]to return to the LCD home page if not needed.
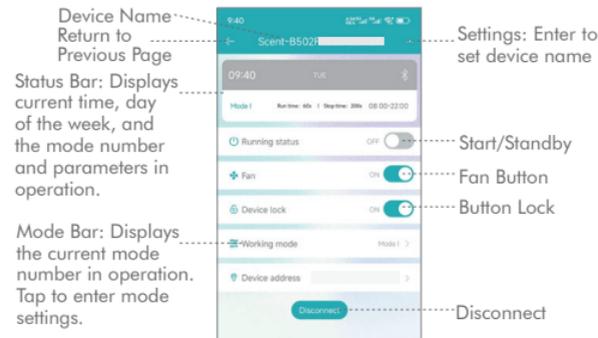
APP CONTROL

1. Scan to Download the APP

Use your browser to Scan the QR code above to download the app, or use another APP to scan and then navigate to the browser to download and install Scent Tech. You can also search for Scent Tech on Google Play/App Store to download the APP.

Important Tips:

1) APP permission settings, including location services and Bluetooth connections, must be authorized for the app to function properly.

2) This device only supports Bluetooth mode. No login is required. Click "Bluetooth" to search for and connect to the device.

Device Name
Return to
Previous Page

Status Bar: Displays current time, day of the week, and the mode number and parameters in operation.

Mode Bar: Displays the current mode number in operation. Tap to enter mode settings.

Settings: Enter to set device name

Start/Standby

Fan Button

Button Lock

Disconnect

2. Add a Device

Scan: Scan the QR code on the device to connect.

Search and Connect: Go to the app's home page and click on "Bluetooth" to search for and connect to the device.

- My Devices: Displays the devices that have been connected before. Click on any device bar to enter the working interface of that device for device management. Long-press the device bar to remove the device.

- Available Devices: Displays the available Bluetooth devices within the Bluetooth range. Click on the device you want to connect to enter the detail page of that device.

3. Device Details Page

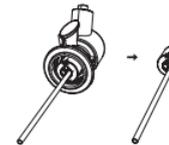|	
Status	The mobile phone can turn the device on/off.
Fan	The mobile phone can turn the fan on/off.
Device Lock	The mobile phone can lock/unlock the device.
Working Mode	5-segment working mode. Click any column to customize the setting of the week, timing power-on and power-off time periods, and fragrance frequency setting, etc.
More	Click the more icon in the upper right corner to rename the device.

CONCENTRATION & CONSUMPTION

Grade	On time(s)	Pause time(s)	Consumption (g/h)
Minimum concentration	5s	600s	0.02
Medium concentration	100s	300s	0.67
Maximum concentration	200s	20s	2.42
100% Text	Continuous On	0	2.66

Note: The data is for reference only. The amount of mist produced by different essential oils may vary. The data above is based on the essential oil used in the test: Park Hyatt (density ≥ 0.95).

REPLACE ATOMIZER COMPONENTS

The atomizer head assembly is divided into: Atomizer head, Atomizer components ,and essential oil bottle. Operation steps: Unscrew the essential oil bottle, pull out the suction tube, remove the atomizer core, and insert the new atomizer core into the atomizer head. Align the suction tube with the small hole in the atomizer core and press it firmly.

(Note: Press all components firmly to prevent detachment.)

MAINTENANCE AND UPKEEP

Scent diffusers require regular cleaning and maintenance every 1-2 months when in normal use. Below is the method for cleaning.

- Spray nozzle cleaning

* Use 95% "alcohol + cotton swab" to gently wipe the nozzle, removing the residue of essential oil liquefaction

* Cleaning the atomizer core can be cleaned by soaking a cotton swab in 95% alcohol and wiping the core with it, or by soaking the atomizer core in alcohol and then allowing it to dry.

- Oil bottle cleaning

* Before changing essential oils each time, clean the oil bottle with alcohol and allow it to dry completely.

When equipment is not used for a long period, it is necessary to clean the internal nozzles and other components thoroughly.

* Add 95% industrial alcohol to the empty bottle.

* Turn on the device and run it for 10-15 minutes.

* Turn off the device, pour out the alcohol from the bottle and let it dry before reassembling the device.

* Power off storage, unplug the power supply, to prevent electrostatic damage to the circuit.

⚠ SAFETY PRECAUTIONS FOR USE

Safe use

① After loading the essential oil, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.

② During the transportation of the equipment, it is necessary to empty the essential oils from the bottles to avoid oil leakage and damage to the equipment.

③ This device cannot be used for air humidification and cannot be filled with water;

④ Please place it in a location inaccessible to children and pets.

⑤ Store in a dry and cool place, do not use this device in high temperature or humid environments.

Forbidden

① Do not cover the equipment in use.

② Prohibit the use of overloaded power outlets, power cords, or damaged power plugs, as this may damage equipment or even cause fires.

③ Essential oils should not be ingested and should be kept away from contact with the eyes. In case of eye contact, rinse thoroughly with plenty of water; if there is a strong sensation, seek medical attention immediately.

④ Please do not disassemble the equipment. If any abnormalities are found in the product, please contact us promptly.