

04 REMOTE CONTROL

Level Button

- ◆ L1 (Level 1): On for 16s, Off for 300s
- ◆ L2 (Level 2): On for 16s, Off for 180s
- ◆ L3 (Level 3): On for 16s, Off for 60s

Timer Button

- ◆ 1h: 1-hour timer
- ◆ 4h: 4-hour timer
- ◆ 8h: 8-hour timer

Start/Standby Buttons

- ◆ Match the remote control with the device: Press and hold the standby button, then press and hold the power button on the device for 2 seconds to switch on the device, and wait until the green light on the device blinks to complete the pairing.

Match the remote control with the device

Turn off the device, hold down the remote's standby button, then press and hold the device's "Power Button" for 2 seconds to turn on, to complete matching with the specified device.

The remote control can set three concentration levels, three timer levels, and on/off:

- ◆ **Level Button** | Press any L1/L2/L3 level button to switch working levels
- ◆ **Timer Button** | Press the "1h/4h/8h" button to set the working time to 1h/4h/8h, the device will stop working after reaching the set time; if the remote sets the working level without timer setting, the device will default to a 24-hour cycle.
- ◆ **Toggle** | Press to Start / Standby.

Note: The device's working mode is based on the last action (button, remote, Bluetooth), for example: after Bluetooth disconnection, the device continues to work in Bluetooth mode.

06

05 ANTI-TILTING ALARM

When the machine tilts beyond 45°, the device emits a "beep-beep" alarm sound. The air pump will stop working for 10 seconds and resume normal operation only after the device is returned to an upright position.

06 MAINTENANCE AND UPKEEP

Scent diffusers require regular cleaning and maintenance every 1-2 months when in normal use. Below is the method for cleaning.

① Spray nozzle cleaning:

- ◆ Use 95% "alcohol + cotton swab" to gently wipe the nozzle, removing the residue of essential oil liquefaction
- ◆ Cleaning the atomizer core can be cleaned by soaking a cotton swab in 95% alcohol and wiping the core with it, or by soaking the atomizer core in alcohol and then allowing it to dry.

② Oil bottle cleaning:

- ◆ Before changing essential oils each time, clean the oil bottle with alcohol and allow it to dry completely.

When equipment is not used for a long period, it is necessary to clean the internal nozzles and other components thoroughly.

- ◆ Add 95% industrial alcohol to the empty bottle.
- ◆ Turn on the device and run it for 10-15 minutes.
- ◆ Turn off the device, pour out the alcohol from the bottle and let it dry before reassembling the device.
- ◆ Power off storage, unplug the power supply, to prevent electrostatic damage to the circuit.

07

07 REPLACE ATOMIZER COMPONENTS

The atomizer head assembly is divided into: Atomizer head, Atomizer components, and essential oil bottle.

Operation steps: Unscrew the essential oil bottle and wipe it clean with a dry cloth. Remove the atomizer components, then insert the new atomizer components back into the device.

(Note: Press all components firmly to prevent detachment.)

08 CONCENTRATION & CONSUMPTION

Grade	Work time/s	Stop time/s	Consumption(g/h)
Minimum	1s	500s	0
Medium (Default Level)	16s	300s	0.09
Maximum	16s	60s	0.39
100% On Text	Fully Open	0	1.84

1. The above data is based on the test essential oil used: Park Hyatt (density ≥ 0.95).
2. The above data is for reference only, and the amount of atomization produced by different essential oils will be different.

08

SAFETY PRECAUTIONS FOR USE

Safe use:

- ① After loading the essential oil, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.
- ② During the transportation of the equipment, it is necessary to empty the essential oils from the bottles to avoid oil leakage and damage to the equipment.
- ③ This device cannot be used for air humidification and cannot be filled with water;
- ④ Please place it in a location inaccessible to children and pets.
- ⑤ Store in a dry and cool place, do not use this device in high temperature or humid environments.

Forbidden:

- ① Do not cover the equipment in use. The power socket or adapter should not be placed above the mist outlet to prevent long-term infiltration of essential oil spray from corroding the adapter and causing power damage.
- ② Prohibit the use of overloaded power outlets, power cords, or damaged power plugs, as this may damage equipment or even cause fires.
- ③ Essential oils should not be ingested and should be kept away from contact with the eyes. In case of eye contact, rinse thoroughly with plenty of water; if there is a strong sensation, seek medical attention immediately.
- ④ Please do not disassemble the equipment. If any abnormalities are found in the product, please contact us promptly.

09

User Manual XX

SMART CYLINDRICAL SCENT DIFFUSER

Scent machine

[Please read the manual carefully before use and keep it properly]

(01SU)

绘制	客户代码	物料名称	规格/mm	材质/工艺	版本/日期	审核	备注
设计部·冯		ST-01SU说明书	350×110	五折页风琴折 157克铜版纸	2025-10.27		

Please read and follow the instructions carefully. You may also scan the QR code below to view the operation video:



Scan the QR code to download the app



Equipment Operation Video



Equipment after-sales Video


产品参数		
Size:104x104x304mm	Weight:815g	Power:5W
Input:Type-C/5V/2A	Capacity:120mL	Coverage:200m ³

包装配件			

01

01 INSTALLATION INSTRUCTIONS


Rotate the atomizer head counterclockwise by 30 degrees, then lift it upward to remove both the atomizer head and essential oil bottle. Add an appropriate amount of essential oil, tighten the bottle in the direction of the arrow, and reassemble all components back into the device.

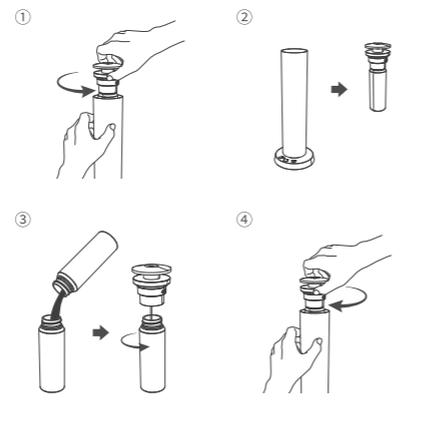

Warning: After loading essential oils, the device must always remain upright and facing upwards, not inverted or tilted, otherwise it may damage the internal components of the device.

02

02 APP CONTROL(BLUETOOTH MODE)

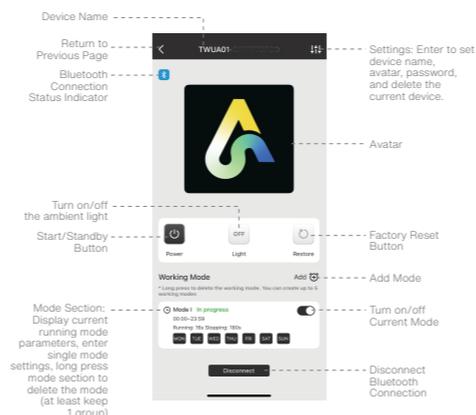

After Bluetooth connection, the device immediately switches to Bluetooth mode and operates according to the Bluetooth settings:
Scan the QR code with your phone to download and install the "Art Diffuser" APP → Run the APP → Select "Start Adding" → Go to the "Search and Connect" page, search for and connect to the device.
You can also click the "Scan" icon in the upper right corner to scan the Bluetooth QR code on the device to connect it.

Note:It is recommended to allow all APP permissions, including location services, Bluetooth connection, and sending notifications.

◆ **All devices** | Available devices within the phone's Bluetooth range are displayed in the "All Devices" group, click on any device icon to connect to that device, after successful connection, it will jump to the device details page.

◆ **My Devices** | Devices that have been connected are displayed in the "My Devices" group, devices not currently within Bluetooth range are shown in gray.

03

◆ Device Status Page

- Ⓛ Power: The mobile phone can turn on/off the device operation status with one press.
- Ⓛ Light: The mobile phone can turn on/off the ambient light with one press.
- Ⓛ Restore: The phone can be reset to factory settings with a single button press.

◆ Working Mode:

You can create 5 work modes, click on the mode window, and you can customize and edit the day of the week, time period, and frequency.

- ① Day Setting: Select the desired days,
- ② Time Period Setting: Adjust the dial to select the working time period.

Note: If the time period needs to cross 00:00, it must be set as two consecutive time periods (the end time cannot be less than the start time), for example, 23:00~02:00, set as two groups: 23:00~23:59, 00:00~02:00.


- ③ Frequency Setting: Adjust the dial to select the working frequency.

Operating time range: 1~30 seconds; Pause time range: 60~500 seconds.

◆ More Settings:

- ① Change device name & avatar (this setting can only be saved locally on the phone)
- ② Bluetooth password setting: Set a password for Bluetooth device connection. Anyone connecting to the device next time will need to enter the password. If no password is required, click "No Password".
- ③ Delete Device: Disconnect the Bluetooth connection of the device and remove it from the history in the "My Devices" section.

03 INDICATOR LIGHT / BUTTON

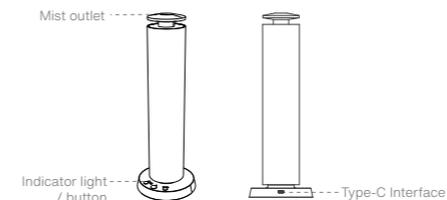


04

Indicator & Button instruction

◆ Battery indicator light

- Charging: Indicator stays steadily red.
- Low Battery: Indicator flashes red.
- Medium Battery: Indicator stays steadily yellow.
- Fully charged: Indicator stays steadily green.

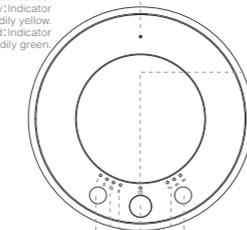

◆ Power Indicator Light:

- The light stays solid green when the device is turned on.
- The light turns off when the device is turned off.
- The light flashes green rapidly 3 times when updating data in Bluetooth mode.
- The light flashes green rapidly 3 times when restoring factory settings.

◆ Concentration Button:

- Short press to switch concentration levels/ pause.
- Press and hold for 5 seconds to restore factory settings.

◆ Concentration Indicator light

- Level 1: On for 15 seconds, off for 300 seconds, indicator stays steadily 1 white light.
- Level 2: On for 16 seconds, off for 180 seconds, indicator stays steadily 2 white light.
- Level 3: On for 16 seconds, off for 60 seconds, indicator stays steadily 3 white light.

◆ Bluetooth indicator light

- The indicator light flashes blue rapidly three times: Bluetooth is connecting.
- The indicator shows blue light always on: Bluetooth is connected.

◆ Timed Button:

- Short press to switch the timed duration.

◆ Timer Indicator Light:

- 1-hour timer: One white light turns on.
- 4-hour timer: Two white lights turn on.
- 8-hour timer: Three white lights turn on.

◆ Power Button:

- Press and hold for 2 seconds to turn the device on/off.
- Short press to switch the ambient light colors:
- 1st press: White light.
- 2nd press: Yellow light.
- 3rd press: Blue light.
- 4th press: Ambient light turns off.

Restore factory instruction

Long press the Concentration button for 5 seconds to restore factory settings, with the factory settings parameters being: the air pump defaults to running for 16 seconds and stopping for 180 seconds, and the time is set from Monday to Sunday, 08:00-22:00.

05